



**Design Registered Product**  
Registration # 323986/7/8/9S

# DiamondGrip® Handrail Domes



Aged Care facilities need not include Tactile Indicators on stairways, escalators, travelators and/or ramps, as long as handrails incorporate a raised dome button in accordance with AS1428.

Ground tactile indicators can cause problems for users of walking frames and wheelchairs. As a result Aged Care facilities are exempt from using TGSIs under the NCC if raised dome buttons are used on handrails. CTA manufactures DiamondGrip® Handrail domes which incorporate a Braille message and are available as a combination set, advising blind or partially sighted pedestrians they are approaching a stair or ramp from either an upwardly or downwardly direction.

A peel and stick backing makes installation and compliance with the codes extremely easy to achieve.

## KEY FEATURES

- Meets the requirements of AS1428.1
- Low profile design to ensure they do not pose a safety risk
- Peels and Stick install
- Manufactured from a single piece of 316 marine grade stainless steel
- Durable, long-lasting
- Match the style of most hand rail applications
- Are highly functional, providing enhanced awareness i.e direction of travel.

**MATERIAL**

Manufactured from Marine Grade 316 Stainless Steel with satin finish.

**APPLICATIONS**

Used on handrails at the top and bottom of stairs and ramps in aged care facilities, as an alternative to tactile ground surface indicators.

**DIMENSIONS**

70mm long and 40mm wide formed into an arc with a 20mm radius. Suitable for all standard handrails.

**INSTALLATION**

Easy Peel and Stick install.

**COMPLIANCE**

All CTA products conform with the requirements of the Australian standards and have been tested by NATA accredited facilities.

- AS1428 Design for access mobility
- NCC - National Construction Codes

**WARRANTY**

CTA provides a comprehensive warranty, in accordance with our published warranty statement which can be viewed on [cobbletac.com](http://cobbletac.com).

**CTA INSTALLERS**

CTA's accredited installers are available to do the installation work for you – with short turnaround times and guaranteed workmanship.


**MORE INFORMATION**

Product Installation, list of Approved Products and Material Safety Data Sheets are available upon request.


**PRODUCT OPTIONS**

PRODUCT TYPE	DIRECTION	PRODUCT CODE
Stairs	Right Side - Up Left Side - Down	DGDSU
Stairs	Right Side - Down Left Side - Up	DGDSD
Ramps	Right Side - Up Left Side - Down	DGDRU
Ramps	Right Side - Down Left Side - Up	DGDRD


Stairs:  
Right Side - Up  
Left Side - Down

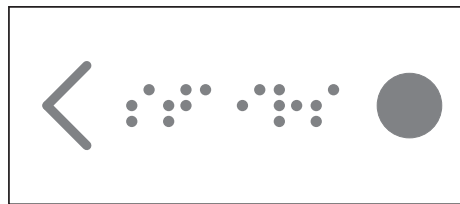




Stairs:  
Right Side - Down  
Left Side - Up

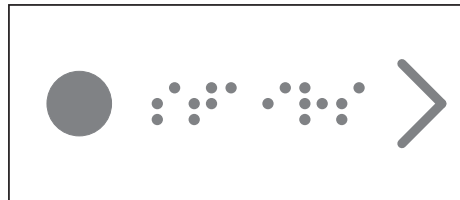

Ramps:  
Right Side - Up  
Left Side - Down

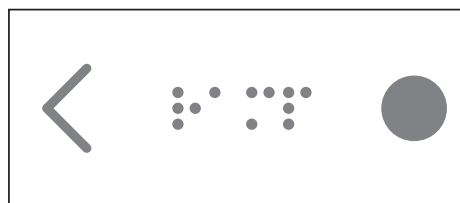

Ramps:  
Right Side - Down  
Left Side - Up

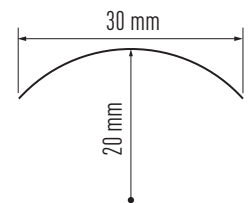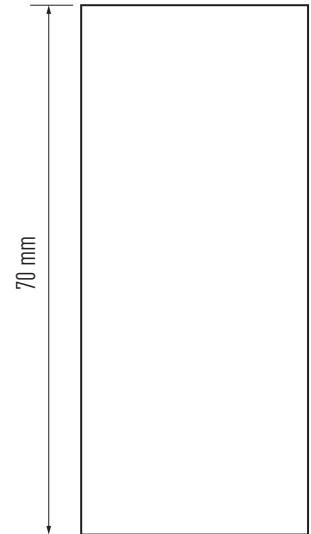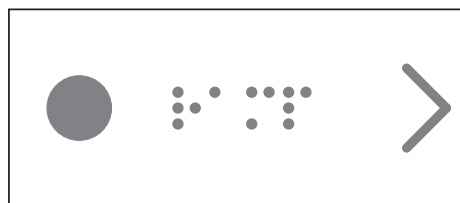

**CUSTOM OPTIONS**

CTA DiamondGrip® handrail domes can be custom made to your requirements. They can be used to notify users of different floors, locations within buildings and other spatial information. Please contact CTA for further details.

**CALL CTA ON 1300 282 282**  
TO ARRANGE A MEETING WITH A SALES CONSULTANT

VICTORIA 1300 282 282 NEW SOUTH WALES 1300 282 679 QUEENSLAND 1300 282 753 WA 1300 282 282



[WWW.CTAGROUP.COM.AU](http://WWW.CTAGROUP.COM.AU)

THE INFORMATION IN THIS BROCHURE IS CORRECT AT THE TIME OF PRINTING. SOME DETAILS MAY CHANGE WITH THE RELEASE OF NEW OR UPDATED PRODUCTS. THE CONTENTS OF THIS DOCUMENT REMAIN THE PROPERTY OF CTA AUSTRALIA PTY LTD. AND ARE PROVIDED FOR CTA AUSTRALIA PTY LTD CUSTOMERS ONLY. ALL INFORMATION INCLUDING ALL TEXT AND IMAGES MUST NOT BE COPIED WITHOUT PRIOR APPROVAL IN WRITING FROM CTA AUSTRALIA PTY LTD.